

# Aquaporin Inside® Essence FO14D

Hollow Fiber Forward Osmosis module



High retention  
and yield



Low specific  
reverse salt flux



High concentration  
factor



Compact and small  
footprint

## PRODUCT TYPE

The Aquaporin Inside® Essence FO14D module is designed for Forward Osmosis (FO) applications. Biomimetic hollow fiber module comprising an active layer of polyamide thin film composite (TFC) with integrated aquaporin proteins. The addition of aquaporin water channels into the rejection

layer makes the Aquaporin Inside® FO membrane capable of preserving valuable components such as aromas, flavors and nutrients. The use of hollow fibers allows for a very high packing density.


## PRODUCT SPECIFICATIONS

Product name	Fiber ID	Membrane area	Water flux	Specific reverse salt flux
Aquaporin Inside® Essence FO14D module	0.20 mm	13.8 m <sup>2</sup> 148.5 ft <sup>2</sup>	11 ± 1.5 LMH	0.15 ± 0.05 g/L

The stated product performance is based on following testing conditions:  
0.5 M NaCl (2.9 %) draw vs DI water (FO mode), temperature: 25°C (77°F), single pass mode, counter-current flow, feed flow rate: 400 LPH, draw flow rate: 200 LPH, transmembrane pressure (TMP) feed to draw: 0.2 bar (2.9 psi).

ELEMENT  
DIMENSIONS

Weight, dry  
4 kg (8.8 lbs)  
Weight, filled with liquid  
7 kg (15.4 lbs)

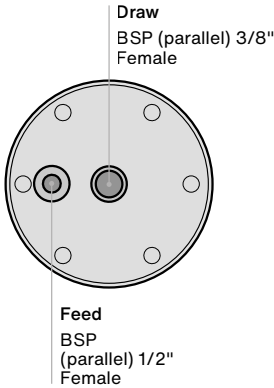


RECOMMENDED OPERATING CONDITIONS

Operating mode	Counter-current flow, inside-out
Transmembrane pressure (TMP) feed to draw	0.2 bar / 2.9 psi
Temperature range	5–20°C / 41–68°F
pH range	4.5–8
Pre-filtration <sup>a</sup>	≤ 50 µm

<sup>a</sup> The optimal pre-filtration is application dependent.  
<sup>b</sup> Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty, Aquaporin A/S recommends removing residual free chlorine by pre-treatment prior to membrane exposure.  
<sup>c</sup> Refer to cleaning guidelines in the User Manual.

ADDITIONAL INFORMATION

- ✓ Module should be operated in vertical position with feed inlet in the top and draw inlet in the bottom.
- ✓ It is recommended to rinse the module for 30 min, prior to first use.
- ✓ It is advisable to pre-treat the feed solution to remove suspended solids. Particles might damage the fibers and possibly cause a decrease in performance.
- ✓ Run feed solution prior to draw solution to avoid osmotic drying of the membrane.
- ✓ Do not allow the module to run dry as this will compromise the membrane performance.
- ✓ Immediately flush the module on feed side with clean water for ≥ 30 min after use (draw side connections open).
- ✓ The module can be stored at room temperature, but preferred storage is at 4°C.
- ✓ Keep out of direct sunlight.
- ✓ To prevent biological growth during prolonged system shutdowns, the module should be immersed in a preservative solution. Rinse thoroughly before re-use.
- ✓ Keep the module moist at all times after initial wetting.
- ✓ The information provided in this document is for informative purposes only. It is the users own responsibility to ensure appropriate usage of this product. Aquaporin A/S assumes no obligation, liability or damages incurred for the misuse of the product or for the information provided in this document. This document does not express or imply any warranty as to the merchantability or fitness of the products.

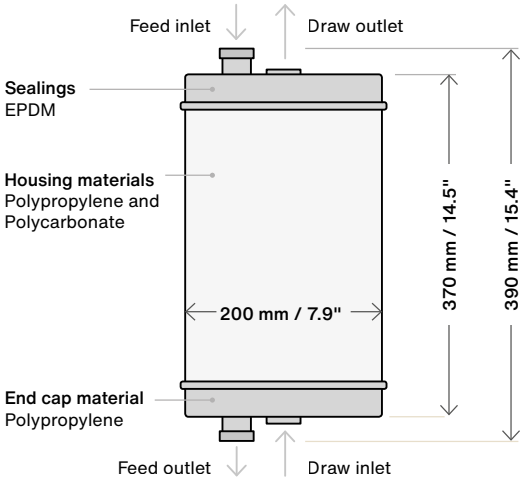

MAXIMUM OPERATING CONDITIONS

Transmembrane pressure (TMP) feed to draw	≤ 2 bar / 29.0 psi
Feed inlet pressure	≤ 2 bar / 29.0 psi
Draw inlet pressure	≤ 2 bar / 29.0 psi
Max. particle size	≤ 50 µm
Free chlorine tolerance <sup>b</sup>	< 0.1 mg/L

CLEAN-IN-PLACE (CIP)<sup>c</sup>

Temperature	≤ 40°C / 122°F
pH range (Feed side)	2–11
pH range (Draw side)	2–7
Pressure	≤ 0.5 bar / 7.3 psi
Duration	20 min

REGULATORY

This product is 'safe for use' as per the requirements according to the **21 CFR 177.2550 US FDA** regulations for concentration of coffee, tea, juices and low alcoholic solutions of maximum 20% in concentrate.  
**WARNING!**  
• This product can expose you to chemicals, including Bisphenol – A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)  
• This product is not intended for use in contact with infant formula and human milk.

**DISCLAIMER:** Aquaporin A/S shall not be liable nor responsible for direct, special, incidental, consequential, punitive or indirect losses or damages in connection with the furnishing, performance or use of this material. Aquaporin A/S cannot be held responsible for any technical or typographical errors or omissions and reserves the right to make changes to the products and datasheet without prior notice.

©2023 Aquaporin A/S. AQUA and Aquaporin Inside are a registered trademark or trademark application of Aquaporin A/S in various jurisdictions.  
All other company names and products may be trademarks or registered trademarks of their respective companies.

Aquaporin A/S  
Nymøllevej 78  
2800 Kongens Lyngby  
Denmark

Phone: +45 8230 3082  
sales@aquaporin.com  
aquaporin.com

Headquarter: 54/18 Bui Quang La, An Hoi Tay Ward, HCMC, Vietnam  
Branch office: 77 DHT10B, Dong Hung Thuan Ward, HCMC, Vietnam  
Phone: (028) 6258 5368 – (028) 6291 9568  
Email: info@atswatertechnology.com  
Website: [www.atswatertechnology.com](http://www.atswatertechnology.com)

