



OptiClean[™] Y Eco is an EDTA/phosphate-free high pH (alkaline) powdered cleaner developed to lower negative impacts on the environment while maintaining aggressive cleaning action. The formulation includes a bio-degradable chelant along with solubilizing agents, and membrane safe oxidizers, ideal for removing organic, biological, silt, particulate, and other acid insoluble foulants from thinfilm composite, ultrafiltration, and microfiltration membranes. Ideal for membrane systems troubled by high organic/biological loading.

Features / Benefits

- Phosphate-free formulation lowers negative impact on the environment
- EDTA surrogate utilized for improved bio-degradability
- Buffered pH to maintain optimum cleaning performance throughout cleaning cycle
- Best results when used in a program that includes either OptiClean[™] X Eco or Lavasol [™] 1
- Classified for use in membrane systems producing drinking water (ANSI/NSF Standard 60)

Uses

- For use on reverse osmosis (RO), nanofiltration (NF), ultrafiltration (UF) and micro-filtration (MF) membranes
- Formulated to dissolve organic foulants from the membrane surface
- To aid in the removal of particulate, colloidal, microbiological and other acid insoluble foulants from the membrane surface

Specifications

Appearance	White powder
pH (1% solution)	10.00 - 11.05

Packaging

Pail: 25 lbs Pail: 45 lbs Pail: 55 lbs Pail: 10 kg Pail: 25 kg Bulk Bag: 1000 kg





For special packaging options, please contact PWT or your local distributor.




General Mixing & Application Instructions for OptiClean[™] Y Eco

- 1. Inspect all cleaning system components including CIP tank, hoses and cartridge filters. Flush or replace if necessary. Fill cleaning tank with RO permeate or DI water. Turn on agitator or tank recirculation pump.
- Slowly add OptiClean[™] Y Eco to cleaning tank (1 pound [0.45 kg] of OptiClean[™] Y Eco for every 12 gal [45 L] of water) and mix thoroughly. The solution pH should match product specification. If necessary, adjust pH with a membrane–approved chemical such as caustic, citric, sulfuric, or hydrochloric acid. The solution should be heated up to 35°C to improve cleaning efficacy.
- 3. Circulate solution in the same direction as the feed flow. Typical circulation times are 30-90 minutes.* PWT recommends cleaning each stage of the system separately. Maximum flow rate per pressure vessel is 40 gpm (152 Lpm) for 8-inch elements and 10 gpm (38 Lpm) for 4-inch elements. Maximum pressure for cleaning is 60 psig (4.2 kg/cm²).
- In cases of heavy fouling, divert the first 10-20% of cleaning solution to drain to prevent redeposition of removed solids.
- 5. Rinse with RO permeate before returning system to service. When returning unit to service, divert product water to drain until any residual cleaning solution has been rinsed from system.
- *Depending on the nature of the fouling, a soak period may be necessary for optimum results. Please contact PWT or your local distributor for custom cleaning procedure, or consult PWT's Technical Bulletin 503 for further cleaning recommendations.

ProDose XPRT[™] – Scaling Prediction Software

ProDose XPRT[™] uses the most accurate scaling prediction calculations available to accurately determine effective antiscalant dosage, and cleaning chemical usage. The user can enter multiple cases to study various operating conditions, directly enter concentrate analysis, and select the best PWT product and dosage for the application.

ProDose XPRT[™] is available upon request only. Please contact your PWT representative for more information.

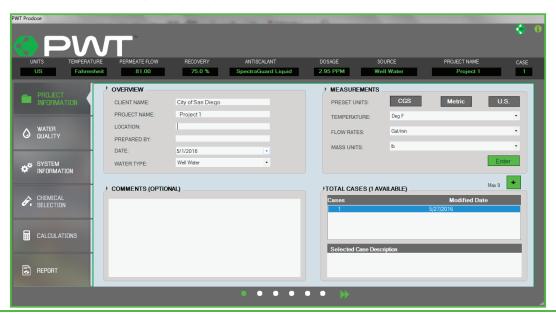



Head Office: 54/18 Bui Quang La, Ward 12, Go Vap District, HCMC, Vietnam Branch Office: 77 DHT10B, Dong Hung Thuan Ward, District 12, HCMC, Vietnam Phone: (028) 6258 5368 – (028) 6291 9568 Email: info@atswatertechnology.com Website: www.atswatertechnology.com